


BEST AVAILABLE COPY

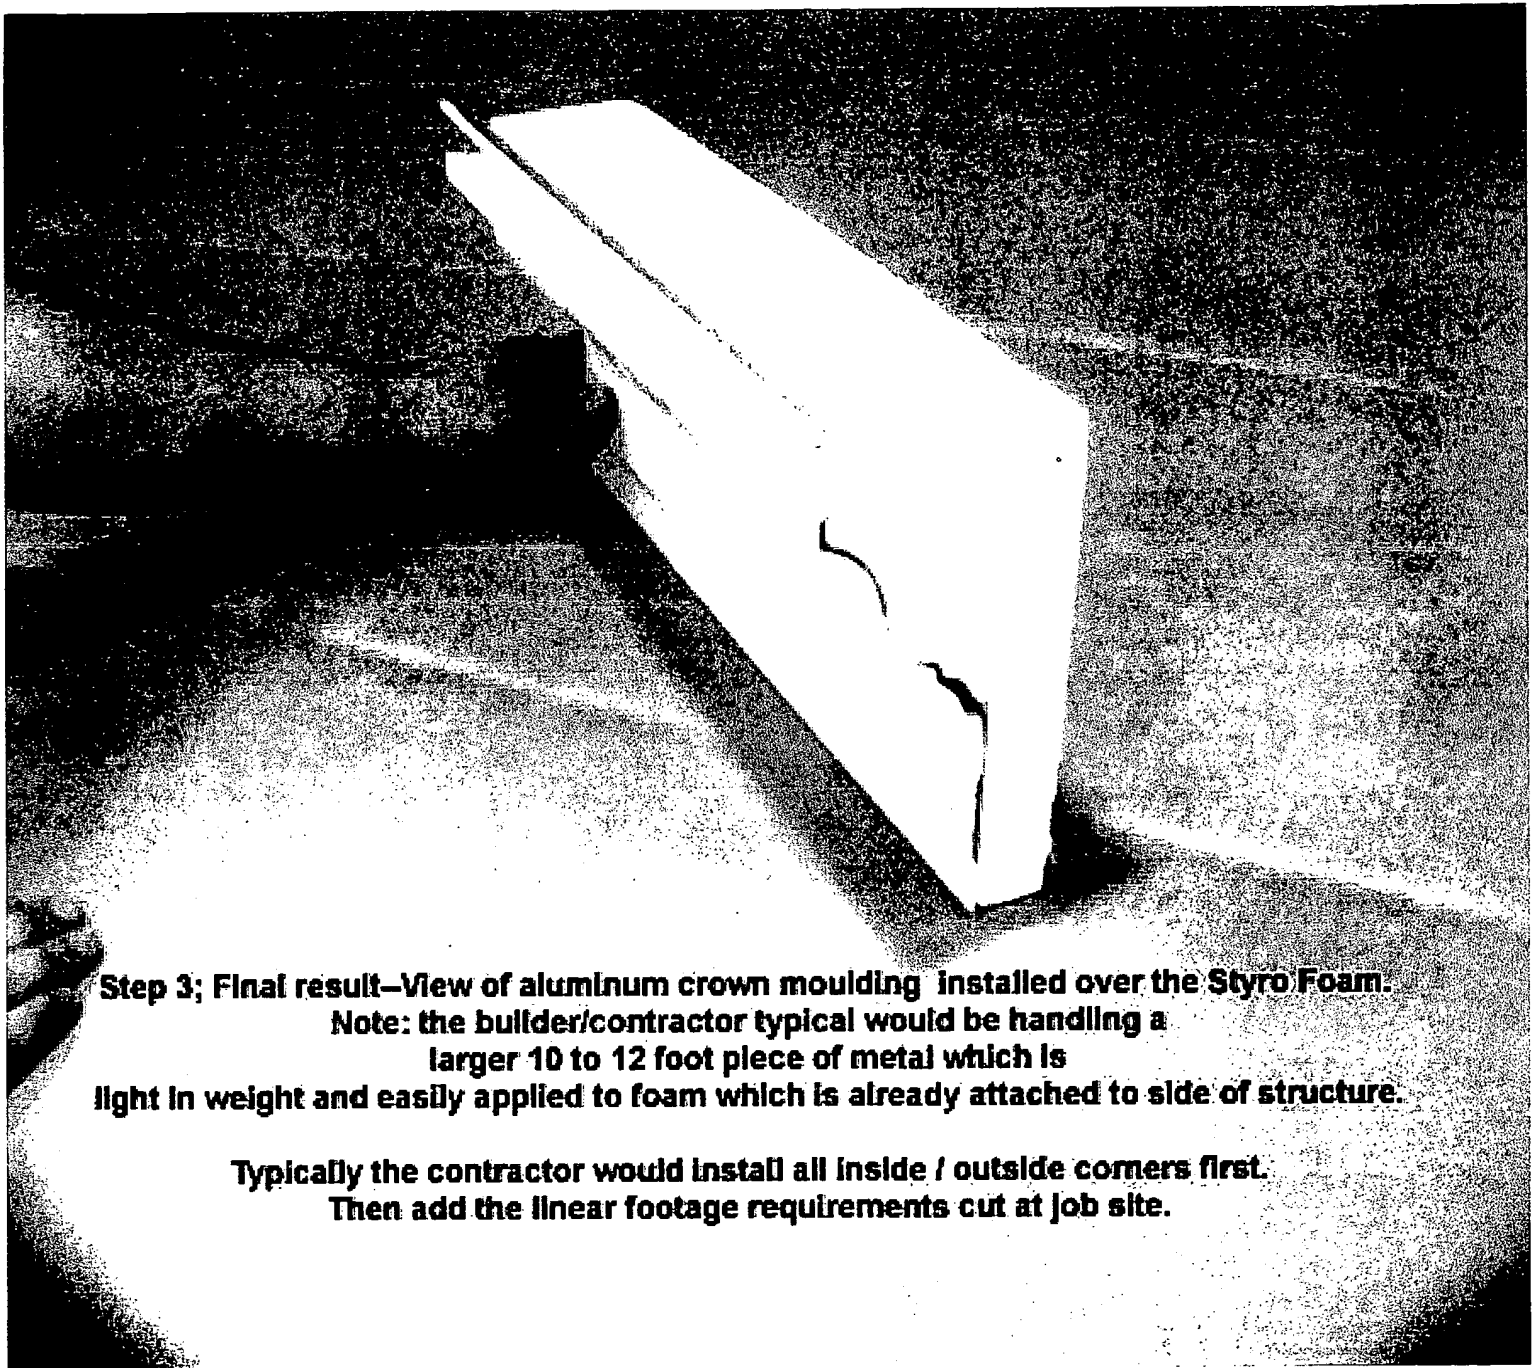

Step 3; Final result—View of aluminum crown moulding installed over the Styro Foam.
Note: the builder/contractor typical would be handling a
larger 10 to 12 foot piece of metal which is
light in weight and easily applied to foam which is already attached to side of structure.

Typically the contractor would install all inside / outside corners first.
Then add the linear footage requirements cut at job site.